


# Rotisserie Motor Replacement


1. Disconnect power
2. Remove the gearbox cover -located on the side of the oven by first removing the retaining bolts and lifting up and off. (fig.1)
3. Loosen the two 3/8-16 x 6" long tension screws to relieve belt tension. (fig.2)
4. Remove v-belt. (fig. 3)
5. Loosen set screw on the small pulley hub and remove it from the Motor shaft. Save the key. (fig. 3)
6. Remove the wiring access cover on the end of the motor.  
Make a note of the wire locations before unplugging them. (fig. 4)
7. Remove the four 3/8-16 bolts that hold the motor to the mounting plate and replace the motor. (fig.5)
8. Note: there are two flat washers used as spacers on each of the four 3/8-16 bolts that must be retained and reinstalled on the new motor assembly. (fig 5)




(fig.1) gearbox cover-on side of oven

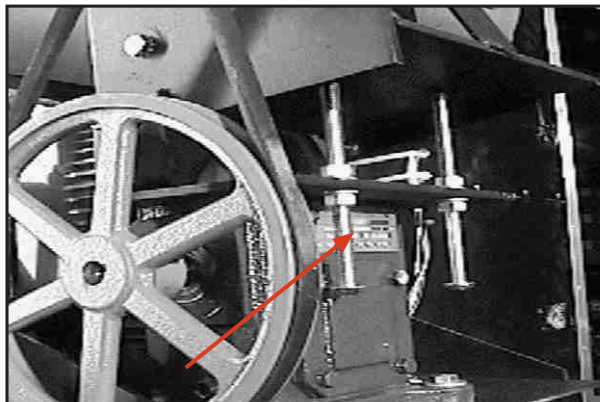


(fig.2) belt tension screws

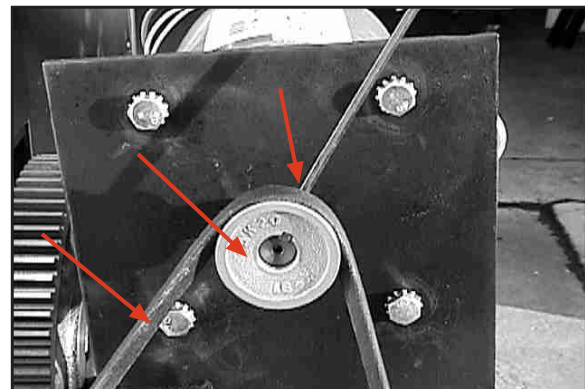

(fig.3) v-belt, small pulley and set screw

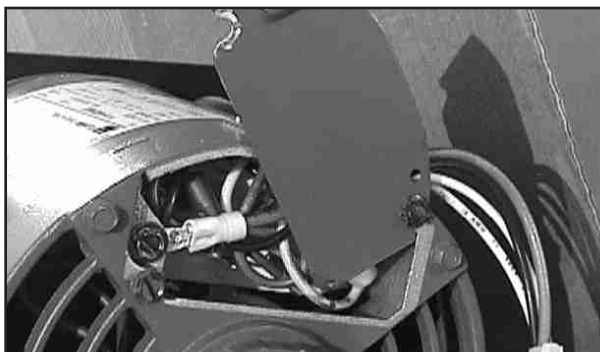

(fig.4) wiring access cover

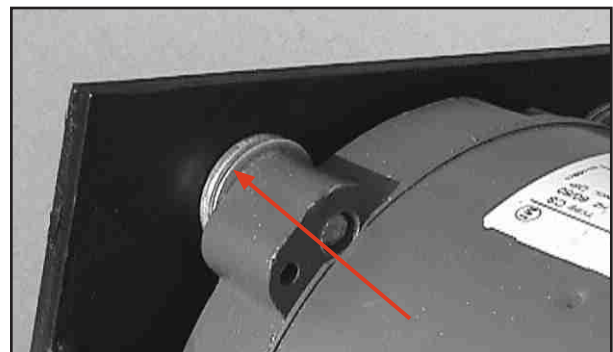

(fig.3) motor mounting bolts and spacers